














CHANGING THE BATTERY


The One-way remote is powered by one CR2032 Battery. To replace battery use a coin to carefully pry apart case




4-BUTTON REMOTE OPERATION:


	System Function	Remark
	Lock Doors	Tap the Lock button for a half second
	Silent Lock Doors	Press and hold for 1.0 seconds
	Panic Function	Press and hold for 3 seconds to Activate or Deactivate panic function
	Unlock Doors	Tap the Unlock button for a half second
	Silent Unlock Doors	Press and hold for 1.0 seconds
	Trunk Release	Press and hold for 3 seconds
 (1sec.)	Car Locator	Press and hold the  button for 1 second first then press and release  button.
	Activate or Deactivate the Remote Start	Press  button once. Press  button twice if set to start safety mode.
	Runtime Reset	Press and hold for 2 seconds
 + 	Switch Code for 2nd Car Operation	Press together & release.
 + 	Shutdown Diagnostic	Press together & release


DOOR LOCKING

Press the  button on the transmitter. The system will lock the doors. (If connected), and the horn chirps and parking lights flash once.



SILENT LOCKING: Press and hold the transmitter  buttons for 1.0 second. No chirp sound will be heard and the lock confirmation will be through the vehicles parking lights only.

DOOR UNLOCKING

Press the  button on the transmitter. The horn will chirp twice and the parking lights will flash twice indicating that the system is now unlocked.

SILENT UNLOCKING: Press and hold the transmitter  buttons for One second. This will Unlock your system. No chirp sound will be heard and the unlock confirmation will be through the vehicles parking lights only,

PANIC FUNCTION:

Press and hold the  button for 3 seconds to activate the personal protection alarm. The door locks, sounds the horn and flashes the parking lights for 30 seconds. Press the  button for 3 seconds to stop the output.

VALET MODE:

When servicing or loaning your vehicle to others, the system should be placed in Valet Mode. Valet Mode prevents the system from remote starting.


 
Enter Valet Mode:

1. Under the system unlocked, turn the ignition switch to ON.
2. Press and hold valet switch for 2 seconds until the LED turns "ON" solid. The LED will remain on as long as the system is in Valet Mode.

Exit Valet Mode:

1. Turn the ignition switch to ON.
2. Push and hold the valet switch for 2 seconds. The LED will turn off indicating the system is exiting the Valet Mode

CAR FINDER:


Press and hold  button for 1 second until the back light turns on then press and release  button to activate the car finder function. The siren will chirp 6 times. The parking light will flash 12 times, assisting you in easily find your car.

IGNITION CONTROL DOOR LOCK/UNLOCK.


 
(See feature bank 1-05)

If the vehicles door locks have been interfaced to the security system, the system will automatically lock the vehicle's doors when the ignition is turned "ON" and /or unlock the vehicle's doors when the ignition is turned "OFF".

TRUNK RELEASE OUTPUT.

Press and hold the  button on the transmitter for 3 seconds to remotely control the trunk release

SECOND VEHICLE SECURITY OPERATION.

You can be utilized to control a second vehicle's security system. To program the remote transmitter to a second vehicle. Press and hold the  +  buttons 2 seconds to select car 2 or car 1 operation.

 

For **Car 2:** When the LED start 2 pause flash then release buttons.

For **Car 1:** When the LED start 1 pause flash then release the button

 

 
REMOTE START OPERATION

TO REMOTE START THE VEHICLE:

When you want to start your vehicle:

1. Press the  button once on the transmitter to activate or deactivate the remote start.
2. The parking light will activate to indicate the remote start has received the signal.
3. After a couple of seconds with the engine running, the parking lights will turn on and the climate controls will activate to adjust the vehicle's interior temperature to your preset setting.
4. The vehicle will run for a programmable 3 to 45 minutes cycle before shutting down. (See feature bank 3-04 setting) When the countdown timer is off or press  button, the system will be shut down.
5. The vehicle refused to start running after 3 unsuccessful attempts.
6. If Remote Start fails to start, the parking light will flash 4 times.


PROGRAMMABLE SAFETY START (See feature bank 3-06)

By default, your Silencer remote starter is programmed to start/stop after pressing the  button 1 time. This default setting can be re-programmed to require 2 presses  -  This setting is known as "Child Safety Mode".

Contact your installer to reprogram this feature if needed

RUNNING TIME EXTENDER

If more time is needed while remote start is active, runtime reset will reset the runtime counter to the pre-programmed setting. Follow the steps below to reset the runtime.


1. The remote start must already be active.
2. Press and hold the  button for 2 seconds.
3. The system will chirp 1 time and flash the parking lights 4 times to confirm that the run time has been reset and will indicate a countdown timer based on the 3, 10, 20, 30 or 45 minutes runtime.
4. The runtime reset only available when remote start is ON.

ENTERING THE VEHICLE WHILE IT IS RUNNING via REMOTE VEHICLE START

1. Disarm the system and enter the vehicle, do not step on the foot brake.
2. Insert the key into the ignition switch and turn to the ON or RUN. The parking lights turn off to indicate remote start is off.
3. Press the brake pedal. The remote vehicle starter will disengage and the vehicle will operate normally.

TEMPORARY STOP MODE:


This mode allows the vehicle to remain running after the key has been removed from the ignition. This feature is useful for occasions when you wish to exit and lock the vehicle for short periods of time but would like to leave the motor running and the climate control on.

1. While the vehicle is running, place the transmission in PARK, set the emergency / parking brake
2. With your foot off the brake pedal, press the  button once. The parking lights will turn on to confirm the system has entered Temporary Stop Mode.
3. Remove the keys from the ignition and exit the vehicle. Press the button to lock the vehicle's doors if desired.

Note: Do not leave children or animals unattended in the vehicle when using the temporary stop feature.

TO TURN OFF THE REMOTE START

When the engine is running (by remote start) and you want to stop it:

1. Press the  button once under the remote start mode.
2. Move the optional remote start enable toggle switch to the "OFF" position. (If installed)
3. Press the brake pedal.

The vehicle will shut down and turn off the parking light to indicate the engine has stopped

DISABLING THE REMOTE START: (If Installed)

This feature allows your system's remote start unit to be temporarily disabled to prevent the vehicle from being remote started accidentally. This feature is useful if the vehicle is being serviced or stored in an enclosed area. To disable the remote start, move the optional remote start enable toggle switch to the "OFF" position.

To Learn the Tach Signal:

1. Press the Valet switch 2 times and hold in on the **2nd**.
2. Hold the foot brake and start the vehicle with the key, after 3 seconds, the status LED will flash to confirm a good tach signal.
3. Release the valet switch and foot brake, a chirp and a light flash will confirm the tach signal is learned.

Note: When the tachometer is programmed, the main unit automatically enters the Tachometer Engine Checking Mode.